



AMBIENT HEATING AND COOLING EQUIPMENT HIRE INSTRUCTIONS & SAFETY

Thanks for choosing McHugh Hire, please take a minute to read the applicable instructions relating to the equipment you have hired.

We're sorry if some of the info sounds like common sense, but we need to cover all the bases. We've tried to translate the instructions for our equipment into a language that people can understand, if any part of it doesn't make any sense, please let us know and we'll fix it.

Please make sure you have fully read the instructions and all terms and conditions and product info at www.mchughhire.com before using any of our equipment to avoid extra cleaning, hire or damage charges.

All of our equipment and equipment's packaging must be returned in the same condition as it was delivered or the hirer will be charged for replacement. All equipment and packaging must be properly cleaned before return unless otherwise stated or paid for.

All equipment is for adult use only unless otherwise stated.

DO NOT LEAVE OUR EQUIPMENT OUT IN THE RAIN.

When you have finished with your equipment please make sure everything is wiped down and cleaned in the same condition you received it. If your equipment is returned un-clean you will be charged for cleaning.

For equipment lost or damaged by misuse you will be charged for replacement or repair.

It is your responsibility to ensure all power leads will not be a trip hazard, we have safety cable covers for hire if required. Please also make sure your leads are clear of water, heat and any other hazardous source. If you have hired RCD safety switches or blocks, please test the devices by pressing the trip button(s) before using each day.

For any equipment that comes with spare parts/batteries/bulbs etc:

Do NOT discard the original/dead parts/batteries/bulbs. They must be marked "dead" and returned with the equipment for our post hire testing. Failure to do so will incur a replacement charge on return. Missing AA, 23A, AAA batteries will be charged at \$2.50 each. All other missing parts will be charged at RRP.

All equipment must be packed away, at loading area, ready for our drivers to pickup.

You are responsible for using our equipment safely, especially equipment that produce heat. Please use common sense and keep children supervised near all McHugh Hire equipment.

Please note many of our items contain GPS tracking units to prevent theft and to recover stolen equipment. This includes all of our expensive equipment and random lower cost items. If you are using the equipment in a high security area, please check that these transmitters won't be a problem on site.

Large electric fan hire:

Please make sure your fan is in a sturdy location, all parts are secured and is not wobbling before and after it is switched on. Place your fan in an area where kids cannot insert objects into the blades.

Our fans are high powered so please make sure they won't blow anything over before you switch the fan on.

Bonaire portable industrial evaporative cooler hire hire:

There are two ways of adding water to our coolers.

1). Hook your hose up to it directly and it will fill until full then automatically top itself up. Please note, some hose fittings may lead depending on age and type. Because of this we recommend only using the hose method for outside events and/or non-slip areas.

2). Fill from the opening flap at the front. With this method you can fill the units until you can see water near the top of the baffle squares inside. This can be done with a bucket/jug or hose.

When you have your water sorted, connect to a 240v outlet and switch on. The three speeds to the left are evaporative cooling speeds and the three to the right are fan only (no water).

There are fine tuning adjustments at the bottom left on the front, we find setting the bleed and flow to medium works best for all applications. We don't recommend changing the settings outside of the 'medium' flow and bleed unless you are a HVAC tech and understand all of the variables.

IMPORTANT: Do not put ice in the machine, this can pull melting ice into the pump and destroy it.

Brazier & Drum fire pit hire:

Please only operate these if you have experience in fire lighting.

- Place a packet of firelighters in the bottom of your brazier or drum with 2-3kg of heater fuel or wood on top and ignite. Add extra fuel as required.

- Braziers only: empty your rubbish before collection or return. If you have selected clean the unit yourself, a simple hose out will do.

- 44 gallon drums only: The lid and lid ring must be on the barrel when returned or collected. DO NOT PLACE ON THE BARREL WHEN HOT, wait until extinguished and then place the lid on for return or collection. If you have chosen to empty and clean the drums yourself, a simple hose out will do.

Outdoor gas heater hire:

MUSHROOM & AREA HEATERS:

Only use in fresh air and not in a confined space. Make sure there is no combustible or damageable materials within 2 meters of the heater top. Make sure it is on stable ground. Only to be operated by competent adults.

Add your gas bottle to the gas bottle holder at base. Make sure the knob is switched to off then turn on your gas bottle. Turn the knob toward the High/* ignition point and the pilot and/or unit will start. If only the pilot starts then turn the knob to the desired temp and it will begin heating.

There is a safety switch (thermocouple) that will need to click on before the heater will continue to burn on it's own. Some units may take up to a minute to activate. This is normal, it is a safety device that will cut the gas if knocked over or blown out. If you have a problem with your unit, please do not tamper with the units, please call us for instructions.

Our heaters are also fitted with a secondary knock over safety cut out switch. The switch is operated by a ball in a cup inside the head, when the ball becomes dislodged (heater knocked over) it will cut the gas. These can stay dislodged when moved and the heater will not turn on. If this happens you can give the heater a gentle shake and the ball will drop down and activate the gas again.

JET HEATERS:

Turn the fan switch on, then push in the gas starter button (you will hear the gas start to enter the jet) and hold then press the igniter button repeatedly until ignited, then let go of the gas starter button. When you are finished, turn

the gas bottle off first then turn off the fan. The area heated must be minimum 360 cubic meters and must be ventilated. Cubic meters = length x width x height.

We wish you all the best and thank you for choosing McHugh Hire for your hire needs!

If you have any great photo's of our equipment in action we'd love you to share them with the McHugh Hire community via our Facebook page <https://fb.me/McHughHireShop> or email bookings@mchughhire.com

If you have any queries please call us on 6162 1662.

